

<2>Stepping Motor & Limit Switch connect diagram

Warning!!

When the circular telegram either the revolution inserts or pulls out stepping motor connetcor, because connetcor will produce the spark and the instantaneous surging big electric current, will so possibly create driver's damage.

3Axis-case stepping motor driver

